


Weight carrying capacity: Max recommended 10kgs
 Recommended bags
 Sport: Junior, Barley, Nelson, Cadet, etc.
 Expedition: Nelson, Nelson L/F, Camper L/F, SUPER C, etc.

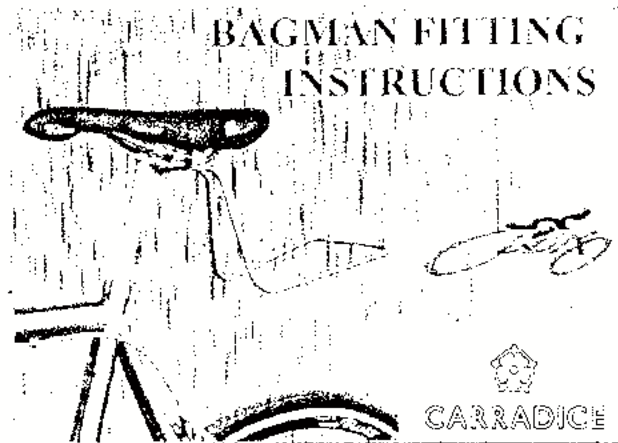

INSTRUCTIONS

- 1 USE 2.5mm A/K TO LOCATE AND SECURE MAINFRAME ENDS TO HOLES IN BOTTOM CLAMP. NEXT USE 6mm A/K TO SECURE TOP AND BOTTOM CLAMPS TO SADDLE RAILS.
- 2 CHECK FOR ALIGNMENT OF MAINFRAME.
- 3 SECURE ALL FIXING BOLTS
- 4 LOCATE BAG AS SHOWN.
- 5 (FASTEN BAG STRAPS THROUGH SADDLEBAG LOOPS ON SADDLE OR AROUND SADDLE RAILS - ALTERNATIVELY, PURCHASE THE BAGMAN Q/R UNIT FOR QUICK INSTALLATION AND DETACHMENT OF ANY SADDLEBAG)

For more information
www.carradice.co.uk
www.edbrodirect.com

BAGMAN Q/R DESIGNED
 AND MANUFACTURED
 BY EDBRO EXCLUSIVELY
 FOR CARRADICE




**CARRADICE BAGMAN
PLASTIC ADAPTER FOR
USE WITH ALL BAGMAN
QR MODELS.**

NO MORE STRAPS!


INSTALLATION INSTRUCTIONS

Remove existing leather straps

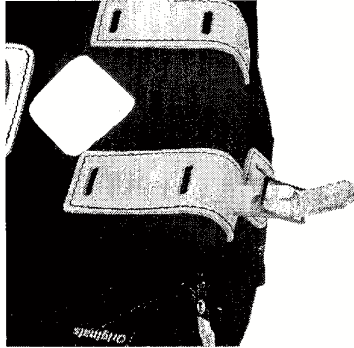

Start

Open Carradice/Bagman adapter Kit

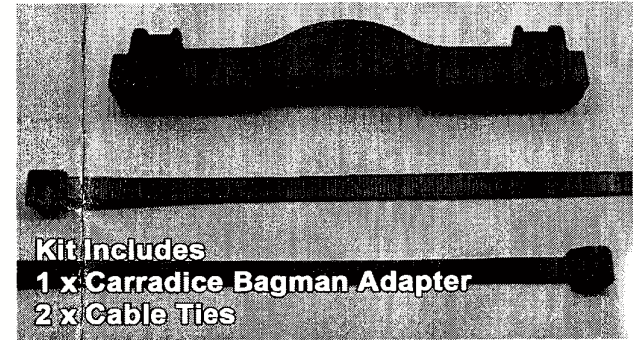


Kit Includes


1 x Carradice Bagman Adapter

2 x Cable Ties


Fasten Cable Ties from the inside to...

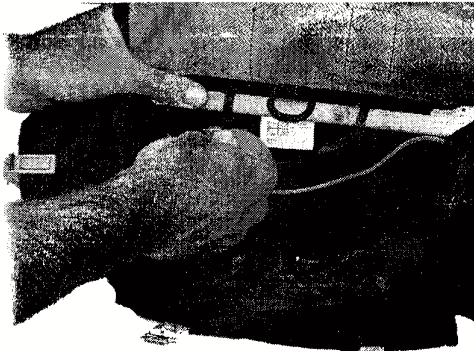


tighten securely!

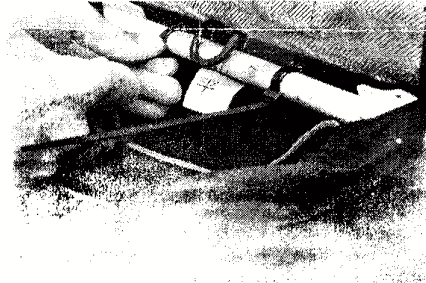


form two open loops on the outside

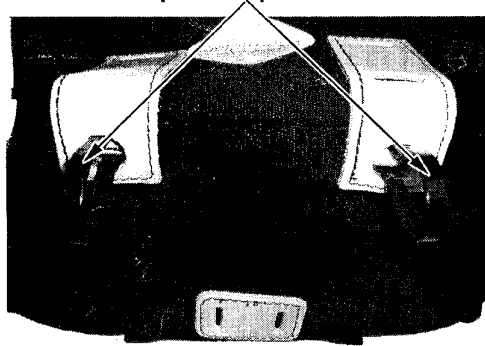

then locate adapter between loops

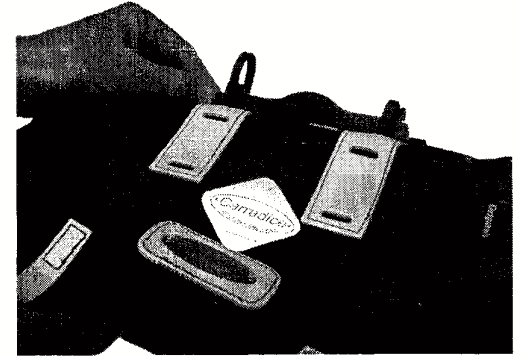

Attach Bag locating qr spindles
through adapter apertures!

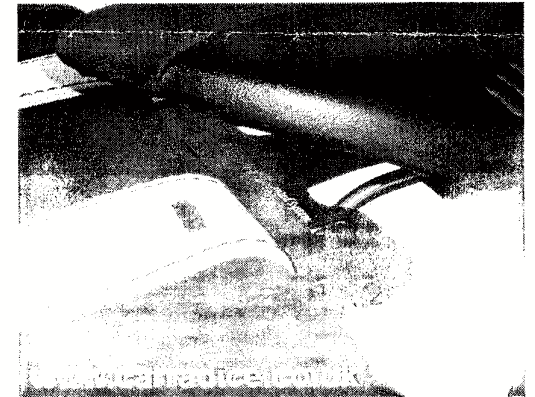

Cable ties must locate securely in recess of
adapter. Check occasionally for tightness